

USAGE

BOIS FRANC - HARDWOOD

INSTALLATION



CLOUÉ
NAILED

MEMBRANE | UNDERLAYMENT



ITEM # 5555470

Papier ciré
recyclé 2 faces - 60 GMS

2 face recycled
waxed paper - 60 GMS



SIMPLE ET RAPIDE
QUICK & SIMPLE

ITEM # 5555470

Papier ciré
recyclé 2 faces - 60 GMS

2 face recycled
waxed paper - 60 GMS

MEM BRA NE UNDER LAY MENT

Questions et commentaires :
1.800.361.8185
www.planchers1867.com

Questions and comments:
1.800.361.8185
www.1867floors.com





ITEM # 555470

Papier ciré recyclé 2 faces 60 GSM

PRÉVIENT LES CRAQUEMENTS ET PROTÈGE
CONTRE LES TRANSFERT D'HUMIDITÉ.

DIMENSION
2MM X 36' X 250"

COUVERTURE PAR ROULEAU : 750 PI²

2 face recycled waxed paper 60 GSM

PREVENTS SQUEAKING AND PROTECTS
AGAINST HUMIDITY TRANSFERS.

DIMENSION
2MM X 36' X 250"


COVERAGE : 750 SQ.FT

PROCÉDURES D'INSTALLATION

- Nettoyer le sous-plancher et enlever tous les clous ou vis qui ne sont pas complètement enfoncés
- Dérouler et étendre la membrane en superposant les joints
- Sceller les laizes avec un ruban adhésif pare-vapeur

INSTALLATION PROCEDURE

- Clean the subfloor and remove all nails or screws that are not fully inserted
- Expand and install the membrane / Overlap joints
- The seams have to be sealed with a vapor barrier tape

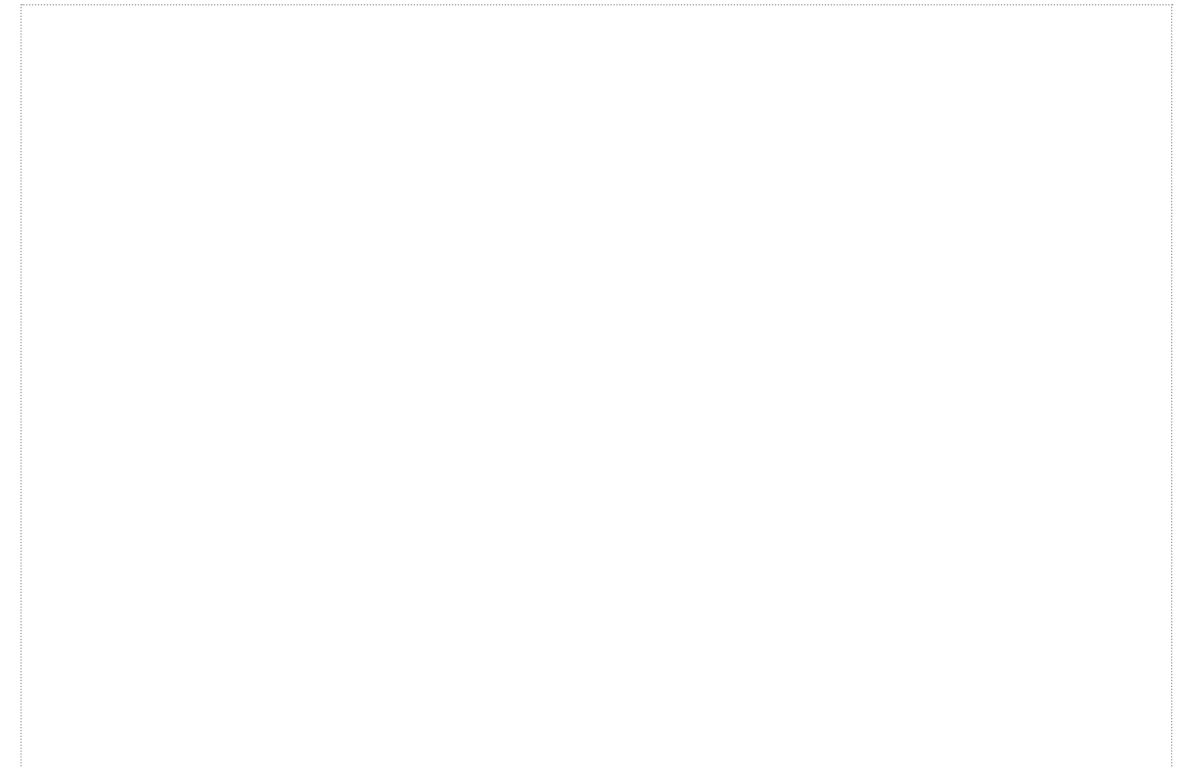

Simple et rapide!

- Rouleaux légers et faciles à manipuler
- Se déroule rapidement et se maintient en place pour simplifier l'installation du plancher
- Aucun délai requis entre la pose de la membrane et celle du plancher

Quick and easy!

- Rolls are light and easy to handle
- The foam is easy to roll out and stays in place during floor installation
- Floor installation can start as soon as the foam has been laid